

Tandberg Intern Reference Guide



1

Plug the power cable into the power outlet in the wall.

2

Plug the network cable into the network outlet in the wall. The network cable must be plugged into the OTN dedicated network outlet.

3

Verify that the Power is turned On
The power box supplies the whole cart, including the monitor and codec – you can turn off your system here at the end of your consult.

4

Verify that the monitor is on both at the back (power switch) and the front (“on” button) of the monitor.
If you cannot see the camera view, you may have to switch the input/source on your monitor.

5

Verify that the codec/camera is on by checking the switch at the back.

6

Pick up the remote control which should be found in the basket.
Unmute your videoconferencing sound by pressing the “Mic Off” button on the remote control.

OTN SERVICE DESK 1-866-454-6861

Tandberg Intern Reference Guide

Placing a Call

1. Press the **Phone Book** key on the remote.



2. Find your desired contact using the arrow keys or searching on the first letter with the letter keys.
3. Press the **green call** button on the remote twice.
4. Wait for the call to connect.

Ending a Call

Press the **Red End Call** button on the remote control again or OK button to confirm that you want to end the call. If you do not want to end the call, move to Cancel (x) and press the OK button to continue the call.



Control Main Camera

Adjusting the camera:

To pan the camera left and right,

use



Volume Control

Press the **Volume** key on the remote to adjust the volume level.



Mute Control

To mute your microphone during a call, press the **Mic off** button on the remote.



Selfview

1. Press **Selfview** once to see a full screen picture of yourself (your outgoing video).
2. Press **Selfview** again to turn selfview off.

Using a laptop for a presentation

Your system comes with a cable used to connect a laptop to the codec. This cable has two different ends, one end is a VGA connection and the other end is a DVI connection.

1. Connect the VGA end of the cable provided to the laptop.



2. Connect the DVI end of the cable provided to the back codec.



3. Press the **Presentation** button on the remote.
4. Make sure that your presentation is open, and use your laptop buttons to navigate through the slides.
5. When you are finished, press the **Presentation** button again to go back to live video.

Presets

How to save a new Camera Preset:

1. Position the camera in the desired position.
2. Press a number button for 1 second to save the corresponding preset.

How to use Camera Presets:


1. When you are in a call, press a number button on the remote control. The camera will move to the corresponding position (or video source).
2. Presets are deactivated when you move the camera manually with the arrow keys.

Hooking up a Laptop



1

Connect the VGA cable from the videoconference system to the laptop.

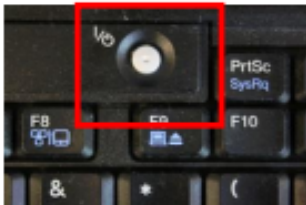

2

Turn the power on the laptop.



3

Press the same keys you would use when displaying your desktop through a projector, usually one of the following combinations: Fn+F4 (or) Fn+F7 (or) Fn+F8.

4

To display the desktop: Press the "Presentation" button.

5

To return to the camera view: Press the "Presentation" button again.



BEST PRACTICE

Make sure to switch between the desktop and camera view for more interactive presentations.

TROUBLESHOOTING

If the desktop still does not appear on the screen, you need to change the resolution of your computer. Select 1024 X 768 for the best results.

Polycom Practitioner Cart Reference Guide



1

Plug the power cable into the power outlet in the wall.

2

Plug the network cable into the network outlet in the wall. The network cable must be plugged into the OTN dedicated network outlet.

3

Verify that the Power is turned On
Press the power button on the Control Panel. If the system does not power up, unlock the cabinet and press the codec power button. A blue light will illuminate.

4


Pick up the remote control

Unmute your videoconferencing sound by pressing the orange "Mute" button located in the center of the remote control.



OTN SERVICE DESK 1-866-454-6861

Polycom Practitioner Cart Reference Guide

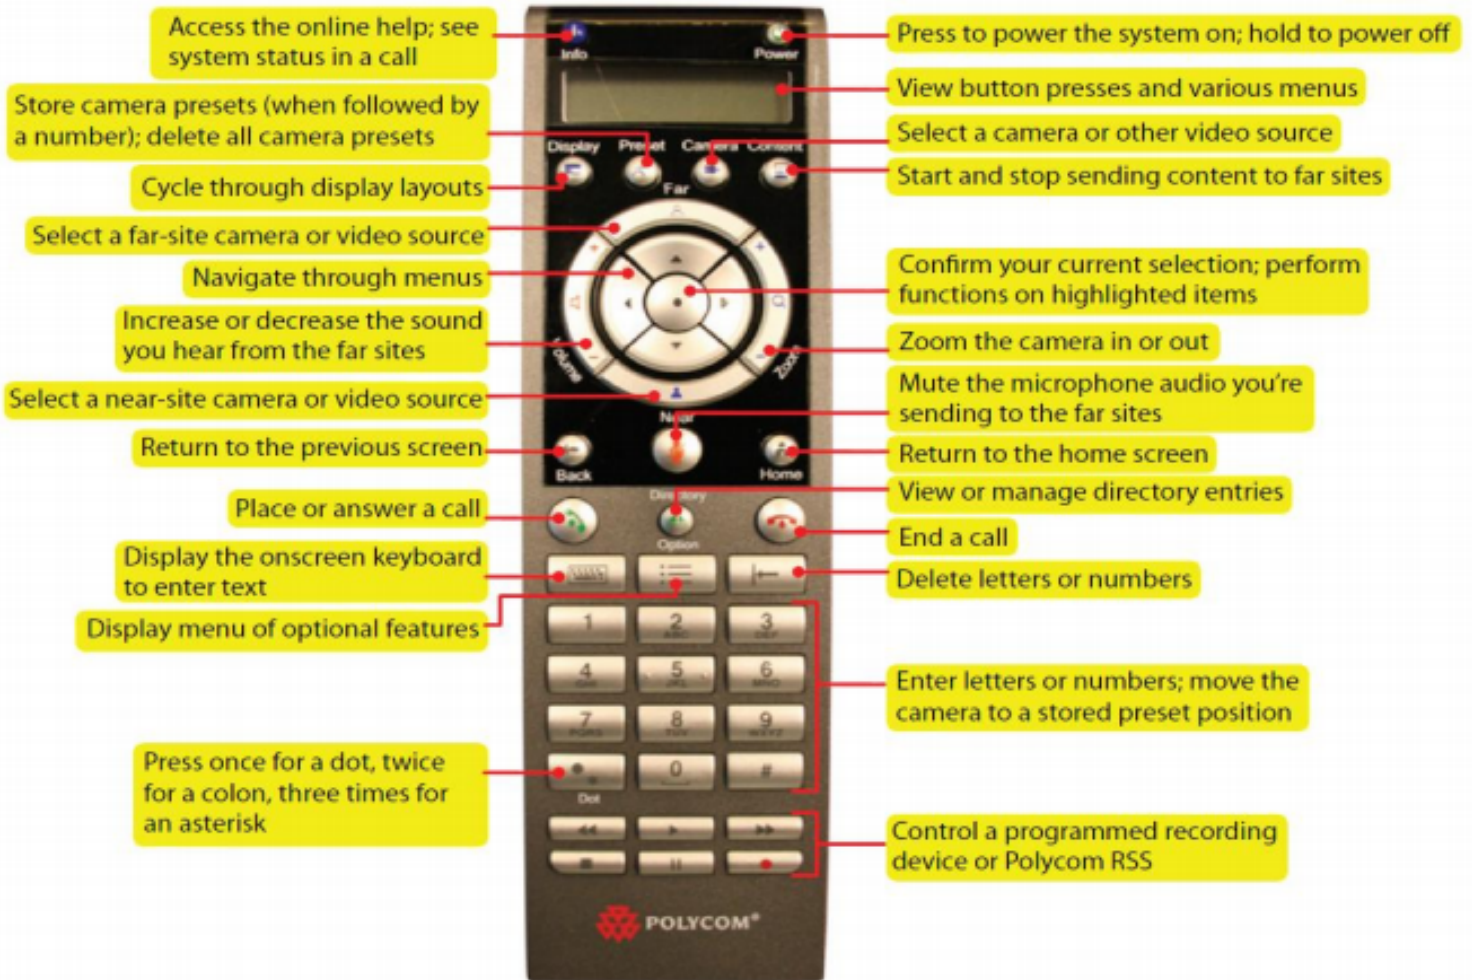


Hooking up a Laptop



1

Connect the VGA cable from the videoconference system to the laptop.

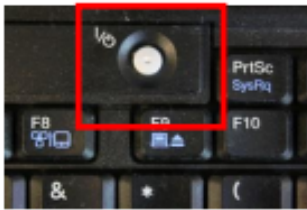

2

Turn the power on the laptop.



3

Press the same keys you would use when displaying your desktop through a projector, usually one of the following combinations: Fn+F4 (or) Fn+F7 (or) Fn+F8.

4

To display the desktop: Press the purple "Graphics" button.

5

To return to the camera view: Press the purple "Graphics" button again.



BEST PRACTICE

Make sure to switch between the desktop and camera view for more interactive presentations.

TROUBLESHOOTING

If the desktop still does not appear on the screen, you need to change the resolution of your computer. Select 1024 X 768 for the best results.

Janberg EX Quickguide



1

Verify that the power cable is plugged into the power outlet in the wall.

2

Verify that the network cable is plugged into the network outlet in the wall. The network cable must be plugged into the OTN-dedicated network outlet.

3

Verify that the system is on.

Verify that lens shutter has been opened by rotating clockwise

4



If the cover is off, the screen will display a self-view or room image.
If the cover is on, screen will be black

5

Place call to patient/virtual site.

Press the Phonebook button on the keypad to access the Global Address Book (GAB). Alternatively, select **"My Contacts"** and scroll down the list and highlight the desired system.

Press the green Call button to connect.

6

Unmute your videoconferencing sound by pressing the microphone icon.



Please Note: For the EX90, you can zoom the camera by using the camera control button on the tablet.




Hooking up a Laptop



1

Connect the VGA cable from the videoconference system to the laptop.

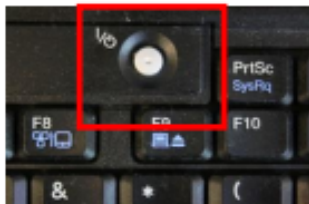


2

Turn the power on the laptop.



3

Press the same keys you would use when displaying your desktop through a projector, usually one of the following combinations: Fn+F4 (or) Fn+F7 (or) Fn+F8.

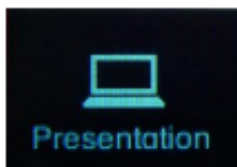

4

To display the desktop: Press the "Presentation" button.

BEST PRACTICE

Make sure to switch between the desktop and camera view for more interactive presentations.

TROUBLESHOOTING

If the desktop still does not appear on the screen, you need to change the resolution of your computer. Select 1024 X 768 for the best results.